



Page: 1 of 1

Display Connector																		
(top left end)										(top right end)								
19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
D6	Sf	D9	Sg	D8	Se	D7	Sd	Df	n.c.	D5	Sp	D4	D3	Sc	D2	Sb	Sa	
(Sg)																		

